



STRONG BOY USER MANUAL

Admiral Staging the Netherlands www.admiralstaging.com +31 534 301 201

SCOPE


The intended use of the Strong Boy is to transport 30 or 40 truss. Always use two carts when transporting 2 meters of truss or longer. Each badge of truss needs to be secured with straps.

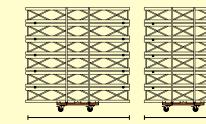

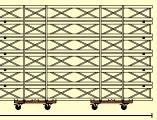


1.99 m or less

2 m or more

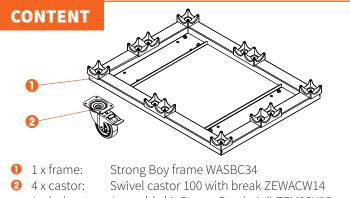


1 x bolt set: Assembly kit Strong Boy (mini) ZEM2SV35

 
USE



 
Use Admiral truss carriers to stack the truss.




Store your Admiral 30 truss carriers

 


Secure with sufficient lashing straps.

 

The Strong Boy is stackable for easy storage.

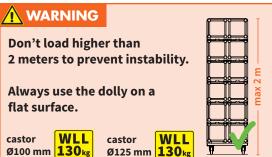



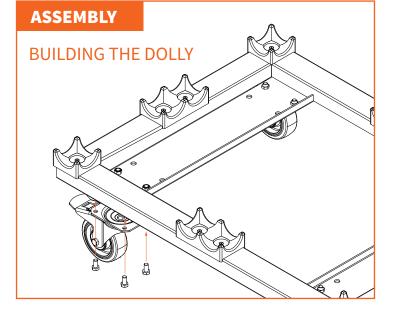

MAINTENANCE


The Strong Boy hardly needs any maintenance under normal use and environmental circumstances. For safety reasons however, all parts must be checked regularly for dirt, damages, loss and corrosion.

Check all components for damage and corrosion.
Damaged and corroded parts shall be rejected and thrown away.

Replaced component shall be genuine Admiral only.





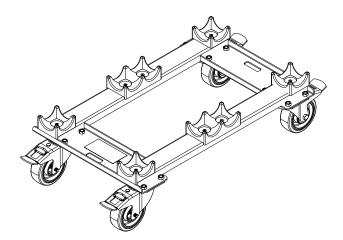


STRONG BOY MINI USER MANUAL


Admiral Staging the Netherlands www.admiralstaging.com +31 534 301 201


SCOPE

The intended use of the Strong Boy mini is to transport 30 truss. Always use two Strong Boy mini per badge of truss. Each badge of truss needs to be secured with straps at any time.

  Always use more than one dolly.







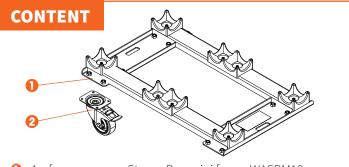


- 1 x frame: **2** 4 x castor: 1 x bolt set:
- Strong Boy mini frame WASBM10 Swivel castor 100 with break ZEWACW14 Assembly kit Strong Boy mini ZEM2SV35

LOADING

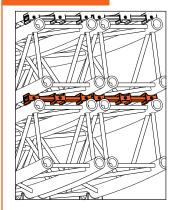

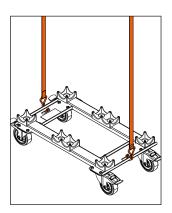

Use Admiral truss carriers Secure with sufficient lashing straps.

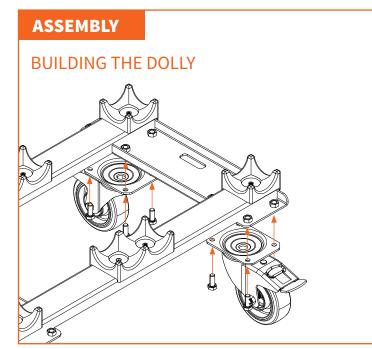


WARNING

Don't load higher than 2 meters to prevent instability.

Always use the dolly on a flat surface.



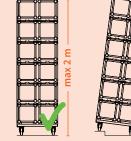

MAINTENANCE

to stack the truss.

The Strong Boy mini hardly needs any maintenance under normal use and environmental circumstances. For safety reasons however, all parts must be checked regularly for dirt, damages, loss and corrosion.

Check all components for damage and corrosion. Damaged and corroded parts shall be rejected and thrown away.

Replaced component shall be genuine Admiral only.

